Outdoor Shower Company, LLC Dallas, Georgia www.outdoorshowerco.com—1-866-746-9371 Manufacturers of Quality Stainless Steel Showers



Accessories may vary due to availability and slight modifications by the manufacturer.

WMFS-442-ADA-SS

FS-SS— Stainless Steel Valve Body with 2 ¼" Flange—1/2" MPT



ADA-665-SS— Stainless Steel Cap

RK-665—Metering Valve Retrofit Kit - Actuator, Metering Cartridge, Filter, Washer



FTA-S03-SH-1— 1" Aerating Stainless Steel Shower Head

WMFS-442-CHV-SS

FS-SS— Stainless Steel Valve Body with 2 ¼" Flange—1/2" MPT



CHN-214-SS— Stainless Steel Nut

CH-633— Chrome Plated Brass Cross Handle

CAR-217-XTLH— Slow Compression Cartridge



FTA-S03-SH-1— 1" Aerating Stainless Steel Shower Head

Installation Guidelines

- Water Supply Line thread should be exposed through wall and roughed in round 24" from flooring surface (recommended, but not required).
- 1. Flush lines before installing.
- 2. Bring ¹/₂" FPT water supply line out of wall.
- 3. Attach 1" shower head to valve body.
- 4. Connect valve to water supply line using Teflon tape.

HOW TO ADJUST THE TIMING ON THE WMFS-442-ADA-SS

TIMING ADJUSTMENT:

These instructions are for the user to adjust the faucet to provide a flow rate to meet the American Disability Act (ADA) regulations which require 10 seconds running time for the water flow. For ADA compliance follow these procedures: NOTE: Timing must be checked with the handle in place.

A) Purge the valve of air by pushing it completely open 4-8 times rapidly and then check the timing cycle.

B) Remove the handle with a 3/32" hex wrench.

C) Time is changed by rotating plastic serrated adjustment nut with a pair of pliers. Raising nut (counter clockwise) shortens time, lowering nut

(clockwise) lengthens time.

D) After each adjustment, replace handle and check cycle time.

E) Once cycle time is satisfactory, lock handle in place making sure set screw is securely fastened on groove in stem using the 3/32" hex wrench. Insert the colored index button.



